



#### IMPORTANT INFORMATION FOR FUTURE REFERENCE

Record the following information from the appliance ID plate and retain this manual for the life of the equipment:

Model #: \_\_\_\_\_

Serial #: \_\_\_\_\_

Date Purchased: \_\_\_\_\_


English

## Operations Manual

Covering Pitco P/N 60126803 Single Vat Control

With Set-Back and Lane Selection Options

# Pizza Hut Fryer Control

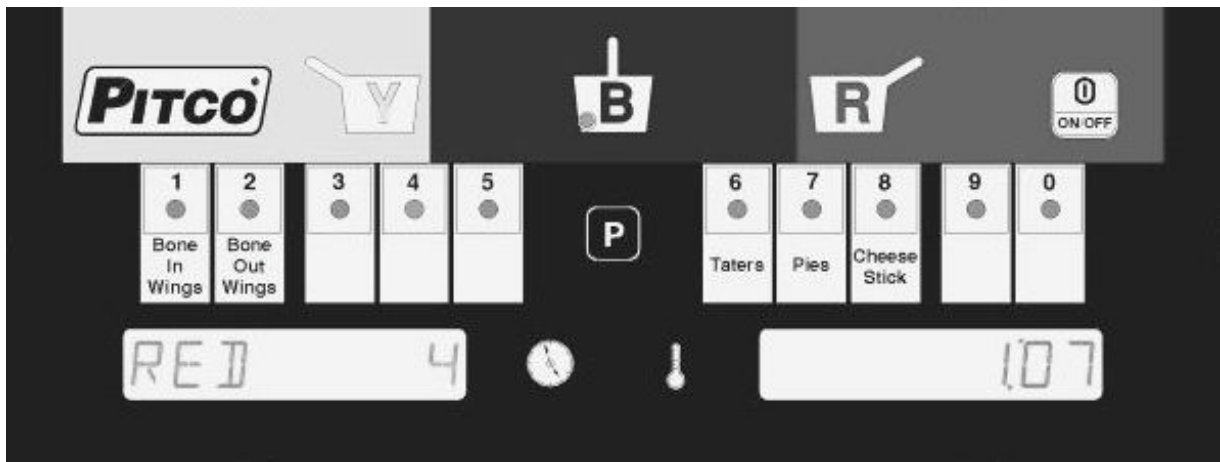


This control was developed specifically for Pizza Hut for use on “WingStreet” products. It utilizes the latest in microprocessor technology and is completely solid state. WingStreet controls offer the latest cooking technology, including temperature and time compensation that requires no user adjustment for consistently cooked product. Other features include selectable melt cycles, and a drain valve interlock. 10 product keys are available to each of 3 or 4 cooking lanes. Each product key may be programmed with cook, shake and hold times to keep pace with changing menus over time.

This manual details the operation and adjustment of the Pizza Hut Fryer Control. The target audience for this text is the Store Manager. This manual reveals all non service adjustments that can be made by keyboard entry, including passwords.



<b>Key Locations and Functions:</b>	<b>3</b>
1.1 To turn the appliance ON:	3
1.2 To turn the appliance OFF:	3
To start a cook:	3
1.4 To cancel a cook:	4
1.5 To view Vat temperature:	4
1.6 To view Cooking Set temperature:	4
1.7 To view Set Back temperature:	4
1.8 To View Current Settings for Cook, Shake, Hold, and Hold Pre-Alarm:	4
To perform a Boil Out operation:	5
1.9.1 Automatic Boil Entry (Water Detection):	5
1.9.2 Manual Boil Entry:	5
1.10 Set back Operation:	5
<b>2 To Enter Programming Level 1 (for the Store Manager):</b>	<b>6</b>
2.1 To Set Cook Temperature:	6
2.2 To Change a Product Key–Cook, Shake, Hold, and Hold Pre-Alarm Times:	6
2.2.1 Cook Time:	6
2.2.2 Shake Time:	7
2.2.3 Hold Time:	7
2.2.4 Hold Pre-Alarm:	7
2.3 To Exit Level 1 programming:	7
<b>3 To Change Options Level 2 ( for the Store Manager):</b>	<b>8</b>
3.1 Fahrenheit or Celsius Display:	8
3.2 Password Change or Required?	8
3.3 Beeper Volume and Tone:	9
3.4 Language Selection:	9
3.5 Melt Cycle Type:	9
3.6 Recovery Test Value:	10
3.7 Control or Timer Selection:	10
3.8 Lane Selection:	10
3.9 Seback Time and Temperature settings:	11
3.10 To Exit Programming Level 2	11

## 1 Key Locations and Functions:

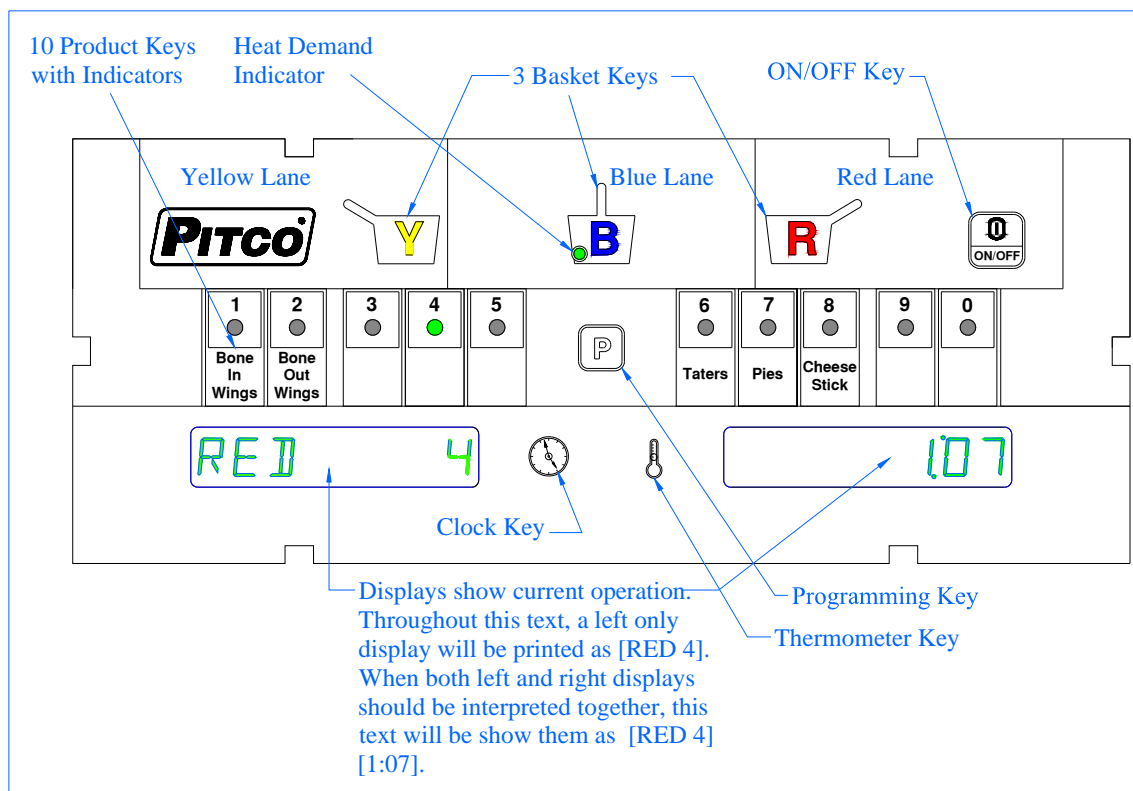

### 1.1 To turn the appliance ON:

If power is applied to the appliance, the displays will show **OFF**. Press the **ON/OFF** key.

Displays will show one of the following:


**MELT**; **HEATING**; or **READY**. Some messages may show in both left and right displays. Wait for the appliance to heat up to the [READY] condition before cooking.

### 1.2 To turn the appliance OFF:

Press the **ON/OFF** key. Display will momentarily show the software version number, and then **OFF**.

### 1.3 To start a cook:


When the display is showing **READY** the appliance has reached set temperature and is ready to cook. Press a basket key then the desired product key. and place product into the vat The left display will show the basket color and the product key, while the right display shows the time remaining in the cook. In the example above, RED lane is cooking product 4 (left display) with 1 minute and 7seconds remaining (right display).

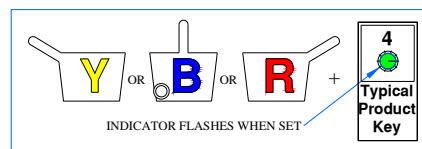

Up to three cooks may run together. While cooks are running, the displays will always show the cook with the least time remaining. Longer running cooks will flash their indicators at a slower rate. Cook time remaining on these keys may be checked by momentarily pressing the basket keys.

#### 1.4 To cancel a cook:

 Press and hold the basket key to cancel a cook. The indicator above the product key will turn off, indicating a canceled cook. If no other cooks are pending, controller displays will return to **READY**.



#### 1.5 To view Vat temperature:

To view the actual vat temperature, press the key. The display will show **ACT 347F** or **ACT 175C**, where "F" is Fahrenheit, and "C" is Celsius. After a few moments, the display will return to [READY], [MELT], [HEATING] or [NOTREADY]-[SET BACK] if no cooks are running.

#### 1.6 To view Cooking Set temperature:

To view the set temperature, press the key *twice*. The display will show **SET 350F** or **SET 177C**, where "F" is Fahrenheit, and "C" is Celsius. After a few moments, the display will return to [READY], [MELT], [HEATING] or [NOTREADY]-[SET BACK] if no cooks are running.

#### 1.7 To view Set Back temperature:


To view the set temperature, press the key *three times*. The display will show **SB 250F** or **SB 121C**, where "F" is Fahrenheit, and "C" is Celsius. After a few moments, the display will return to [READY], [MELT], [HEATING] or [NOTREADY]-[SET BACK] if no cooks are running.

#### 1.8 To View Current Settings for Cook, Shake, Hold, and Hold Pre-Alarm:

To view the current settings for any product key, press the key, followed by the desired product key. The display will show [nCK mm:ss], followed by [nSH mm:ss], then [nHD mm:ss], ending with [nPA mm:ss]. Where "n" is the key number, and "mm:ss" is the time setting.

After a few moments, the display will return to **MELT**; **HEATING**, **READY**, or **NOTREADY SET BACK** when no cooks are running. If cooks are running, the least time remaining will be displayed.

Typical displays using key 4 as an example:

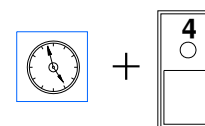

Key 4 **Cook Time** [4CK] is set for 3 minutes and 28 seconds.

Key 4 **Shake Time** [4SH] is set for 2 minutes and :00 seconds before the end of the Cook. *Default value is 00:00, or inactive.*

Key 4 **Hold Time** [4HD] is set for 15:00 minutes. This is the amount of time cooked product may sit in holding bins before a new batch is started. *Default value is 00:00, or inactive.*

Key 4 **Hold Pre-Alarm** [4PA] is set for 00:00 and is inactive (*default setting*). When activated his alarm warns the operators that the Hold Time is about to run out.

In a few moments, the display to **MELT**; **HEATING**, **READY**, or **NOTREADY SET BACK**

4CK	3:28
4SH	2:00
4HD	15:00
4PA	0:00



## 1.9 To perform a Boil Out operation:

Normal maintenance of a fryer requires regular tank cleaning. This process involves draining the vat of oil and filling with water. Cleaning solution is added, and the control is set to boil by one of the following methods:

### 1.9.1 Automatic Boil Entry (Water Detection):

Fill the appliance with water and turn the appliance on. Heat will be applied to the vat warming the water. This control will detect the presence of water by temperatures not rising above the boiling point of water; 212°F (100°C). After a time at this temperature, displays will show

PRESS 0 TO BOIL

Heat will be disabled until the operator responds to this prompt. Pressing the [0] key is a **YES** response to the boil prompt. If pressed, display will show BOIL. Heat will maintain vat temperature at 185°F (85°C) for cleaning as long as the control remains on. To exit boil mode control must be turned off.

*Warning: Pressing any other key at the [PRESS 0] [TO BOIL] prompt is regarded by the control as a **NO** response. With this response, the control will apply heat to the vat as if oil were present in the vat. With water in the vat, a rolling boil will result. This will cause undesirable foam over conditions. And, a potential steam burn hazards to operators performing cleaning operations.*


### 1.9.2 Manual Boil Entry:

After filling an empty vat with water, turn the appliance on. Press the



key and enter key sequence [2], [1], [2]. If control is set to display in the Celsius scale, press [1], [0], [0] keys to manually enter boil mode. The display will show BOIL to indicate entry into boil mode.

To exit boil mode, control must be turned off.

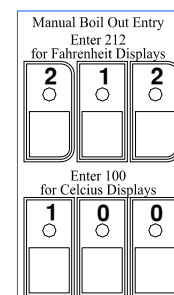

## 1.10 Set back Operation:

Operation of the setback features requires set up values be entered (refer to service manual section 3.8). Factory default settings are with this feature inactive.

### Operation:

Each time a cook is performed, the setback timer is reset. When no cooks occur for the duration of the setback time, the control will enter a setback state and maintain a reduced vat temperature. Both time and temperature of this setback feature are adjustable by the store manager.

1. When the control is in the setback state, the display will show NOTREADY SET BACK
2. Press any colored basket key or product key to exit setback.
3. If the vat temperature is below the READY band, a rapidly pulsing alarm will sound to warn the operator. Display will show LOW TEMP WAIT 959. The m:ss display will show the approximate time needed for the vat temperature to rise to cooking temperature.

Wait for the temperature to return to the READY condition before lowering basket into the fryer.


## **2 To Enter Programming Level 1 (for the Store Manager):**

*Note: The factory default setting for this control does not require a password to be entered. However, the password requirement and value may be changed in section 3.2. Entry of a password when NOT required will not interfere with the programming process.*

With no cook timers running, displays will show one of the following displays: **MELT**, **HEATING**, **READY**, or **NOTREADY SET BACK**. Press the **P** key.

If display shows:

**PASS-----PASSWORD**, a password is required.

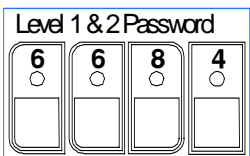
Enter password  using the product keys as a numeric keypad for entry. With correct password entry, display will show **PROGRAM**.

If display shows:

**PROGRAM**; you do not need to enter a password.

From the **PROGRAM** display, continue with this section or go to section 3, or 4.

### **2.1 To Set Cook Temperature:**

- ❑ Press the  key once. The display will show [SET xxxF] [TEMP] or [SET xxxC] [TEMP], where “xxx” is the current temperature setting.
- ❑ Use the product keys for numeric entry to adjust the current setting. Press the **P** key to save setting. Display now shows **PROGRAM**. To exit here, press **P** again, or continue.


### **2.2 To Change a Product Key–Cook, Shake, Hold, and Hold Pre-Alarm Times:**

For each product key, Cook, Shake, Hold, and Hold Pre-alarm times are set in this section.


With display showing **PROGRAM**, continue with the following section for each product key to change.

#### **2.2.1 Cook Time**

Cook Time may be set for each product key. To deactivate any product key enter a zero value for cook time.

- ❑ Press the  key.
- ❑ Display will show **SELECT PRODUCT**. Press the desired product key to change.


The display is now showing [nCK mm:ss] [TIME] where “n” is the key number, “CK” means Cook, and “mm:ss” is minutes and seconds.

- ❑ Use the product keys for numeric entry to adjust the current setting. Press the  key to save cook time and continue setup for this product key.

### 2.2.2 Shake Time

Shake time is an alarm that sounds during Cook Time to prompt operators to shake the basket. Default for this value is zero, meaning the Shake Time is inactive. To use Shake Time, the time value must be a non-zero value, and, must be set to a value less than cook time.

- ❑ Display shows [nSH mm:ss] [TIME] where “n” is the key number, “SH” means Shake, and “mm:ss” is time in minutes and seconds.


- ❑ Use the product keys for numeric entry to adjust the current setting. Press the  key to save shake time and continue setup for this product key.

*Note: The value entered for shake time is the time from the end of the cook.*

### 2.2.3 Hold Time

Cooked product may stand in holding bins for a period of time. This timer produces an alarm to inform operators to discard old product and start a new cook. *Default for this value is zero, meaning the Hold Time is inactive.*


- ❑ Display is showing [nHD mm:ss] [TIME], where “n” is the key number, “HD means HOLD, and “mm:ss” is minutes and seconds.

- ❑ Use the product keys for numeric entry to adjust the current setting. Press the  key to save hold time and continue setup for this product key.

### 2.2.4 Hold Pre-Alarm

Hold Pre-Alarm is a timer setting that is used to warn operators that the Hold Time is about to expire. To use Hold Pre-Alarm, the time value must be a non-zero value, and, must be set to a value less than Hold Time. *Default value is zero, meaning the Hold Pre-Alarm is inactive.*

- ❑ Display is showing [nPA mm:ss] [TIME] where “n” is the key number, PA means Pre-Alarm, and “mm:ss” is minutes and seconds.

- ❑ Use the product keys for numeric entry to adjust the current setting. Press the  key to save pre-alarm time. *Note: Value entered for hold pre-alarm time is the time from the end of the hold period.*

Display will again return to **SELECT** **PRODUCT**. Repeat steps from section 2.2 to make changes to any other product keys or continue.

## 2.3 To Exit Level 1 programming:

Display shows **SELECT** **PRODUCT**.

 
Press the **P** key. Display shows **PROGRAM**. Continue to section 3 “To Change Options”, or, exit here in the next step.

To exit Level 1 programming, press the **P** key again.

Displays will show **MELT**; **HEATING**, or **READY**, when no active cooks are running.

### **3 To Change Options Level 2 ( for the Store Manager):**


The display must show **PROGRAM** from section 2 to change these options. When the product key [0] is pressed, the display will show **SELECT OPTIONS**. Indicator lights above product keys will illuminate to represent options that may be changed. Each option listed below uses the product key [0] to toggle or scroll through available choices in the display. When the correct value is displayed, press the **P** key to save choice. The display will again return to **PROGRAM** for another option selection.



#### **3.1 Fahrenheit or Celsius Display:**

The Controller will display temperatures in the Fahrenheit or Celsius scales. The default scale is °F. With display showing **PROGRAM**, press the product key [0].

 - ❑ Display shows **SELECT OPTIONS**.
- ❑ Press product key 1, display shows [DEGREE n] [F OR C], where “n” is the current setting.
- ❑ Use the product key [0] to scroll through choices (F or C). Press **P** key to save choice.
- ❑ Display shows **PROGRAM**.




#### **3.2 Password Change or Required?**

With factory settings, an operator password is not required to enter programming Levels 1 and 2. The password may be activated or changed in these steps.

With display showing **PROGRAM**, press the product key [0].

 - ❑ Display will show **SELECT OPTIONS**.
- ❑ Press product key 2, display shows [SET PAS] [NEW PASS]. Use the product key [0] to scroll through choices [NO PASS] or [PASS REQ]. Press **P** key to save choice.
- ❑ If [NO PASS] is selected Display returns to **PROGRAM**.
- ❑ If [PASS REQ] is selected, display will show [PASSnnnn] [NEW PASS] to prompt for new password. Displayed value “nnnn” is the current password. Use the product keys for numeric entry to change password. Press **P** key to save choice. Display then shows **PROGRAM**.




*Note: The factory default password (6684) will always work even if a different password is selected here.*



### 3.3 **Beeper Volume and Tone:**

 Volume and Tone of the beeper alarm may be changed in this section. Volume ranges are 1,2, and 3, where 3 is the loudest setting. This model also has a selection for tone.


With display showing **PROGRAM**, press the product key [0].



- ❑ Display will show **SELECT** **OPTIONS**. Press product key **3**, display shows [VOLUME n] [BEEPER].
- ❑ Use the product key [0] to scroll through choices (n= 1,2,3, or T). Beeper volume will change as each selection is made.
- ❑ If "T" is selected an additional display is shown, [TONE n] [BEEPER]. Use the product key [0] to scroll through choices (n= 1,2,3). Beeper tone will change as each selection is made.
- ❑ Press **P** key to save choice. Display shows **PROGRAM**.

### 3.4 **Language Selection:**

 With display showing **PROGRAM**, press the product key [0].




- ❑ Display will show **SELECT** **OPTIONS**.
- ❑ Press product key **4**, display shows [ENGLISH] [LANGUAGE].
- ❑ Use the product key [0] to scroll through choices (ENGLISH, ESPANOL, FRANCAIS, DEUTSCH, HOLLAND).
- ❑ Press **P** key to save choice. Display shows **PROGRAM**.

### 3.5 **Melt Cycle Type:**

 This adjustment allows selection of the melt cycle type and requirement when starting the appliance from a cold start.

With display showing **PROGRAM**, press the product key [0].




- ❑ Display will show **SELECT** **OPTIONS**.
- ❑ Press product key **5**, display shows [LIQUID], the default setting.
- ❑ Use the product key [0] to scroll through choices (liquid, solid, or, no melt).
- ❑ Press **P** key to save choice. Display will again return to **PROGRAM**.

### **3.6 Recovery Test Value:**

 This controller maintains a record of heat up times for the appliance. A poorly running appliance will have increased recovery times stored in this display. There is no selection done here, just the display of recovery time values.

With display showing **PROGRAM**, press the product key [0].


- ❑ Display will show **SELECT OPTIONS**.
- ❑ Press product key **6**; display will show [RECOVERY] [TEST].
- ❑ Press the product key [0]. Display will show [FnnnLyyy], where nnn is the factory recovery value, and yyy is the last warm-up recovery value.
- ❑ After recording these values, press the **P** key. Display will again return to **PROGRAM**.



### **3.7 Control or Timer Selection:**

With display showing **PROGRAM**, press the product key [0].

 - ❑ Display will show **SELECT OPTIONS**.
- ❑ Press product key **7**; display will show [CONTROL].
- ❑ Use the product key [0] to scroll through choices; Control or Timer.
- ❑ Press **P** key to save choice. Display shows **PROGRAM**.




*Note: If timer is selected, heat control outputs are disabled, leaving only the timer functions active. Do not make this selection on Solstice fryer models.*

### **3.8 Lane Selection:**

 This control offer a selection between the Active cook lanes. In the three lane mode, the control responds to basket key location shown on the cover of this manual. Lanes are defined as Yellow, Blue, and Red. After September 2007, conversion to a 4 lane cooking control is possible. In the four lane setting, lane colors are Yellow, Blue, Red, and Green. To change to four lane mode follow these steps.

With display showing **PROGRAM**, press the product key [0].

- ❑ Display will show **SELECT OPTIONS**.
- ❑ Press product key **8**; display will show [LANES n] [ 3 or 4 ], where n is the current setting.
- ❑ Use the product key [0] to scroll through choices.
- ❑ Press **P** key to save choice. Display shows **PROGRAM**.




*Factory default setting is for 3 Lane Control.*

### 3.9 Seback Time and Temperature settings:

 
With display showing **PROGRAM**, press the product key [0].


 
- ❑ Display will show **SELECT OPTIONS**.
- ❑ Press key [9]. Display shows, [TIME **nn**] [SET BACK], where **nn** is the time the control must be idle (not cooking) to enter the setback state. *The default setting is 00, meaning that the setback feature is disabled. Entry on any non-zero value will activate this feature.*




- ❑ Enter the number of minutes [**nn**] using the numbered keys  ... .

*The valid range of time entry is 0 to 99 minutes. Entering 00 will disable the setback feature. Typical values are 30 minutes.*

- ❑ Press  key to save.
- ❑ Display shows **TMP 250F SET BACK**.

- ❑ Enter a new setback temperature using the numbered keys  ... .

*The valid range of temperature entry is 225 to (SP-15) °F. Factory default value is 250°F.*

- ❑ Press  key to save setting. Display shows **PROGRAM**.

### 3.10 To Exit Programming Level 2

With display showing **PROGRAM**, press the  key.



Display will return one of the normal displays: **MELT**, **HEATING**, **READY**, or **NOTREADY SET BACK**.



In the event of problems with or questions about your order, please contact the Pitco Frialator factory at

(800) 258-3708 US and Canada only

(603) 225-6684 World Wide

In the event of problems with or questions about your equipment, please contact the Pitco Frialator Authorized Service and Parts representative (ASAP) covering your area, or contact Pitco at the numbers listed to the left.

MAILING ADDRESS – P.O. BOX 501, CONCORD, NH 03302-0501

SHIPPING ADDRESS – 10 FERRY ST., CONCORD, NH 03301